

Technical Information Manual

Series 66x0 – Fuel Consumption Monitor for high pressure fuel injected engines



Direct fuel consumption technology to suit measurement of high-pressure fuel injection engines upto 1200 kVA

Applications

- Diesel generators
- Marine engines
- Mobile compressors
- Construction equipment

Device Properties

- Wide engine service range – 80 kVA to 1200 kVA
- Measured error: $\pm 0.25\%$
- Medium temperature: -45 to 150 deg C
- Suitable for all standard engine makes
- Remote display available
- 10-36 VDC, 85-275 VAC, self-powered options
- Ex-proof electronics

Your benefits

- Single flowmeter calculates net consumption of engine
- Industry leading accuracy of $\pm 0.2\%$
- Repeatability of better than $\pm 0.02\%$
- Space saving installation – no straight lengths needed
- Unaffected by pulsating flow
- Fuel agnostic
- The lowest pressure drop in a Positive Displacement flowmeter – 0.1 kg/cm^2
- Easy-to-use UI with Backlight enabled LCD
- Process and diagnostic information available for speedy maintenance

Table of Contents

Technical Information Manual	1
Series 66x0 – Fuel Consumption Monitor for high pressure fuel injected engines.....	1
Direct fuel consumption technology to suit measurement of high-pressure fuel injection engines upto 1200 kVA.....	1
1. Revision History	5
2. Measurement principle	6
3. Measurement System.....	7
4. Explosion Protection (Ex d) section	9
4.1 Equipment marking and certification	9
4.2 Permitted area of use	10
4.3 Ambient conditions	10
4.4 Flameproof enclosure design	10
4.5 Mandatory Safety Instruction.....	11
Additional Clarification:	11
4.6 Cable Entries	11
4.7 Electrostatic Hazard.....	11
4.8 Installation requirements	12
4.9 Operation.....	12
4.10 Maintenance.....	12
4.11 Prohibited actions.....	12
4. Input	13
4.1 Measured variables - Direct.....	13
4.2 Measured variables – Calculated.....	13
4.3 Measuring Range	13
4.4 Digital Inputs.....	13
5. Outputs.....	14
5.1 Pulse output	14
5.2 Digital Outputs.....	14
5.3 4-20 mA (4 wire and 2 wire)	14
5.4 MODBUS with RS485	15
5.5 4-20 mA HART.....	15

5.6 Foundation Fieldbus	15
6. Power Supply	16
6.1 Supply Voltage	16
6.2 Power Consumption	16
6.3 Current Consumption	16
6.4 Power supply failure	16
6.5 Electromagnetic compatibility	16
6.6 Connection for pulse output.....	17
6.7 Connection for RS485-Modbus	17
6.8 Connection for Digital Output(s)	18
6.9 Connection for Digital Input(s)	18
7. System dimensions	19
7.1 6650	19
7.2 6670	20
8. Electrical Terminal Connections	21
8.1 Four Wire transmitter with DC voltage	21
8.2 Four Wire transmitter with AC voltage.....	21
8.3 Two Wire transmitter	22
9. Internal Device Settings – STD Transmitter (Four wire system)	23
9.1 Precautions prior to accessing settings	23
9.2 Internal settings in flowmeter device	23
9.3 General settings in device	23
9.4 4-20 mA settings in device.....	25
9.5 MODBUS settings in device	28
9.6 DOP Point	29
9.7 Velocity Unit	29
10. Standard Display Parameters	30
10.1 STD Transmitter (Powered)	30
11. MODBUS RTU protocol in Fluidyne devices.....	31
11.1 Free and Open source Modscan software settings	32
11.2 The Current LTR values can be read by using function code (0x03) (read holding register)	32
11.3 The Cumulative LTR and Flowrate values can be read by using function code (0x04) read input register	33
11.4 To reset the value of the Current LTR using Function code (0x10) preset multiple registers	34

12. Fuel Consumption Monitor Installation Guidelines	35
12.1 Typical installation diagram	35
12.2 Prior to installation of FCM	36
12.3 Air elimination	37
12.4 Products	37
12.5 Normal startup	37
12.6 High temperature startup	38
12.7 Continuous Operation - Clean Filtered Liquid Service	38
12.8 Products that dry/crystallize or polymerize	39
12.9 Custody transfer	39
12.10 Orientation of FCM in pipeline	39
13. Maintenance	40
13.1 Performance Considerations	40
13.2 Cleaning the Flowmeter Assembly	41
13.3 Removal/Replacement of the electronic cards	43
13.4 Removal/Replacement of the sensor card	44
13.4.1 6650 and 6670	44
13.4.2 6640	45
13.5 Servicing check valve assembly	46
13.5.1 6650 and 6670	46
13.5.2 6640	47
13.6 Removal/Replacement of the FCM flowmeter filter	48
13.6.1 6650 and 6670	48
13.6.2 6640	50
14. Troubleshooting	51
15. Contact personnel	53

1. Revision History

Versions	Release Date	Description	Author	Approver	Remark
1.0	03 April 2022	Operation, spares and service of the 66x0 FCM with instructions and do's and don'ts	Shubhankar M	Shivdas M	
2.0	11 Dec 2025	New transmitter detail	Ganesh S	SSM	
3.0	16 April 2026	Details added as per ATEX transmitter requirement	Ganesh S	SSM	

2. Measurement principle


The Positive Displacement principle is the only accurate method of flow measurement due to its direct measurement of volume. Volume is not inferred from velocity of liquid or mass flow rates as in inferential meters.

The Positive Displacement principle works by continuously separating the flow stream into discrete volumetric segments and precisely measuring this volume in a calibrated measurement chamber. The Fluidyne PD meter is based on the time-tested and robust oscillating piston mechanism. In this mechanism, the piston is the only moving part which displaces calibrated volume of liquid from meter inlet to outlet in every rotation. The movement of the piston is recorded by magnetic pickup coils and thus a number of movements are equal to the actual measured volume by multiplying movements with calibrated volume displaced.

The calibrated volume is a nearly constant value for every size of PD meter Fluidyne manufactures. This correlation of piston movement to the calibrated volume is the calibration factor or 'k factor' which is adjusted as per the liquid to be measured by the flowmeter.

As per below diagram, **k factor = (V1 + V2) ml**




Total volume in flow stream = k factor * number of oscillations of piston

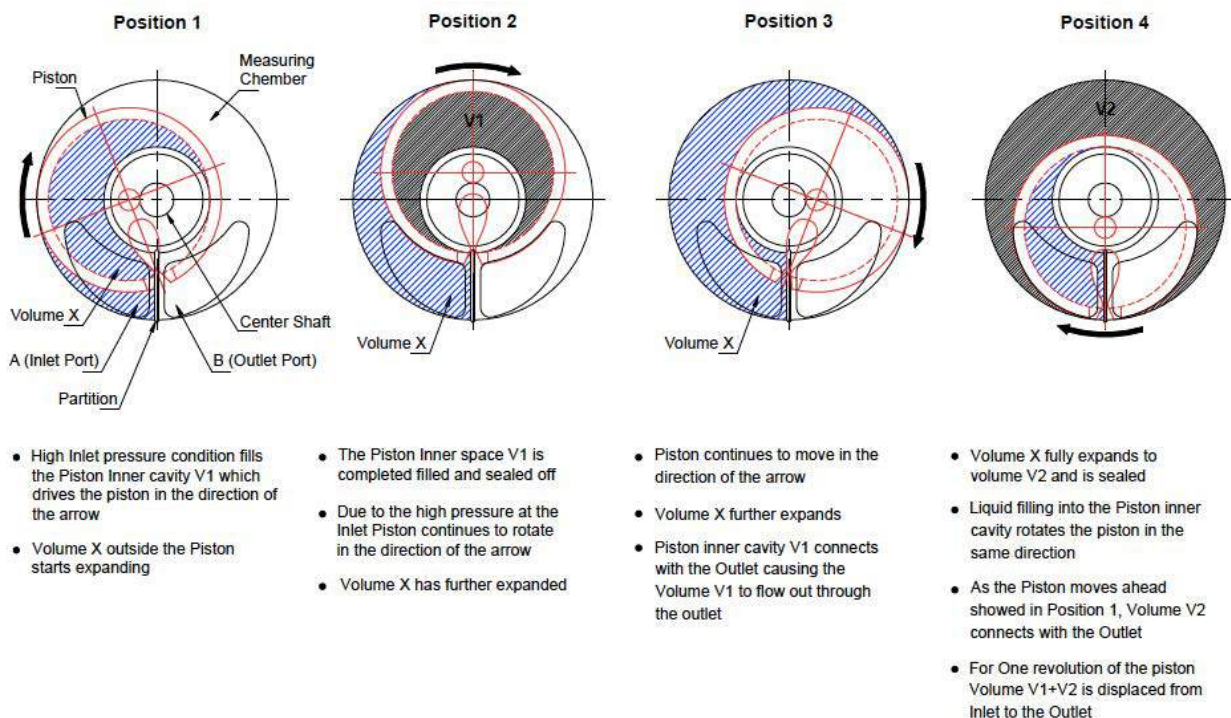

3. Measurement System


The measuring system consists of a sensor and transmitter. The transmitter and sensor form a mechanical unit.

Transmitter

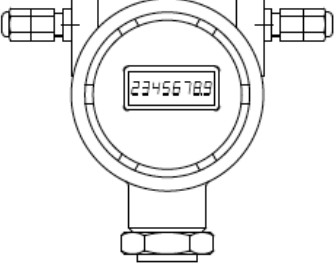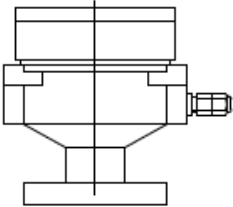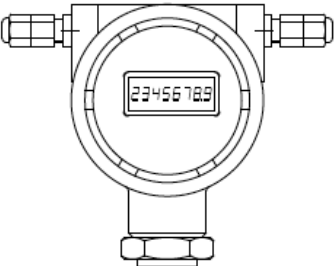	Powered transmitter Device materials - Die cast Aluminium LM06 - ASTM A351 CF3M 316L (option) Window material - Cast, stainless: glass Specifications - Cable entries – 2 nos M20 x1.5 - Rating – Ex db IIC Gb T6 IP66/68 (option) - PESO approved - Capacitive touch keys - Dual compartment with terminal box - 4-20 mA, Modbus, pulse output, 2xDI, 2xDO available - LCD with backlight - AC supply – 86-260 VAC 50 Hz/60 Hz, DC supply – 18-40 VDC - Two wire 24 VDC HART (optional)
	Device materials - Aluminum coated: AlSi10Mg Specifications - Cable entries – 1 nos - PESO approval IIA, IIB, IIC gas groups - Pulse output only - No display
	Battery Device materials - Aluminum coated: AlSi10Mg - ASTM A351 CF3M 316L (option) Window material - Cast, stainless: glass Specifications - Rating – Ex db IIC Gb T6 IP66/68 (option) - PESO approved - Capacitive touch keys/ View key external

	- Dual compartment with terminal box - Segment display Internal battery 3.3 VDC
--	---

Sensor

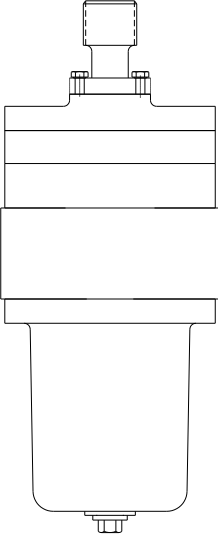	Material of Construction - Aluminum LM04 BS 1490 - Optional 316L ASTM A351 Sizes - DN15 – 6650 (engines upto 600 kVA) - DN25 – 6670 (600 to 1200 kVA) Process connections - Standard - BSPF standard Advantages - Low pressure drop due to one moving part - Measurement of volumetric flow and mass flow - Immune to process influences and pipe bends - Built-in 149 micron pre-filter (washable and reusable)
--	--

4. Explosion Protection (Ex d) section

Applicable to integral mount and remote mount Series 6500 Advanced Flow Computer XXX.
Where XXX – STD/BTC/CT2 transmitter variant.

WARNING – EXPLOSION HAZARD

This equipment is certified for use in hazardous areas under **flameproof protection (Ex d)**.

Failure to follow these instructions may:

- Result in ignition of explosive atmosphere
- Lead to serious injury or fatality
- Invalidate ATEX / IECEx/ UKEx certification

4.1 Equipment marking and certification

II 2GD

Ex db IIC T6 Gb

Ex tb IIIC T85°C Db

IP66 / IP68

$-20^{\circ}\text{C} \leq T_a \leq +60^{\circ}\text{C}$

Interpretation

Parameter	Meaning
II 2GD	Suitable for Gas & Dust environments
Ex db	Flameproof enclosure protection
IIC	Suitable for hydrogen/acetylene (most severe gas group)
T6	Max surface temp $\leq 85^{\circ}\text{C}$
Gb	Zone 1 (Gas)
IIIC	Conductive dust
Db	Zone 21 (Dust)

4.2 Permitted area of use

Gas atmospheres

Zone	Use
Zone 0	✗ Not permitted
Zone 1	✓ Permitted
Zone 2	✓ Permitted

Dust atmospheres

Zone	Use
Zone 20	✗ Not permitted
Zone 21	✓ Permitted
Zone 22	✓ Permitted

4.3 Ambient conditions

- Ambient Temperature: **-20°C to +60°C**
- IP Protection: **IP66 / IP68** (Depends on order specification)

⚠ Operation outside these limits may:

- Compromise flameproof integrity
- Invalidate certification

4.4 Flameproof enclosure design

This equipment uses **flameproof joints (Ex d)** to prevent ignition propagation

Joint Type	Location	Requirement
Cylindrical spigot	Covers & body	Controlled gap
Threaded joints	Bushings, cable entries	≥ 8 full threads engagement
Cemented joint	Glass window	-

4.5 Mandatory Safety Instruction

Flameproof joints shall **not be repaired, machined, modified, or tampered with.**

Additional Clarification:

- Any damaged enclosure or part → **replace only**

4.6 Cable Entries

MANDATORY INSTALLATION CONDITION

Before installation:

- All cable entries shall be fitted with:
 - Certified **Ex db IIC Gb / Ex tb IIIC Db glands or certified blanking plugs**
 - Minimum protection: **IP66 / IP68**
 - Size M20x1.5

Rules:

- Only **one adapter per entry**
- No blanking element with adapter
- Unused entries must be sealed

4.7 Electrostatic Hazard

CAUTION – STATIC CHARGE RISK IN Group III applications

- Painted enclosure may accumulate charge
- Risk increases at humidity < 30%

Cleaning:

- Use **damp cloth only**
- Do NOT dry wipe

Reference standard: IEC 60079-32-1

4.8 Installation requirements

- Installation shall be done by **qualified personnel**
- Ensure:
 - Correct hazardous area classification
 - Proper earthing
 - All joints fully tightened with torque wrench to values specified below

Fastener detail	Material	Location	Torque rating
Allen cap screws M8x25 (8 nos)	SS316 A4-70 to ISO 4762	Body-Front Cover, Body-Rear cover	28.8 Nm
Hex Bolt M6x20 (4 nos)	SS316 A4-70 to ISO 4762	Transmitter body-sensor housing	12.0 Nm
Allen cap screw M6x20 (4 nos)	SS316 A4-70 to ISO 4762	Sensor housing-flange	12.0 Nm
Earthing M8x12 (1nos)	SS316 A4-70 to ISO 4762	Body (left side)	28.8 Nm

⚠ DO NOT OPEN ENCLOSURE PARTS WHEN ENERGIZED

4.9 Operation

- Do not open enclosure in hazardous area
- Ensure IP integrity is maintained
- Ensure all fasteners are tightened

4.10 Maintenance

⚠ WARNING

- Isolate power before opening
- Inspect:
 - Glands
 - Seals
 - Fasteners

👉 No field modification permitted

4.11 Prohibited actions

- Opening enclosure in hazardous area
- Using non-certified glands
- Modifying enclosure
- Using incorrect fasteners

4. Input

4.1 Measured variables - Direct

- Instantaneous volume
- Totalized volume

4.2 Measured variables – Calculated

- Instantaneous volume flow
- Instantaneous mass flow
- Instantaneous mass
- Totalized mass

4.3 Measuring Range

Model	Pipe size (mm)	Pipe size (inch)	Calibrated flow range (LPH)
6650	15	1/2	12-500
6670	25	1	100-1500

4.4 Digital Inputs

Function	Digital event input from PLC/supervisory systems
Max input value	12 VDC pulse
Voltage drop	<= 2VDC
Output frequency	Upto 100 Hz

5. Outputs

5.1 Pulse output

Function	Pulse output to DCS/PLC/BCUs
Version	Open Collector
Max output value	12 VDC pulse (86-230 VAC supply) 24 VDC pulse (24-40 VDC supply)
Open Circuit voltage	12 VDC pulse (86-230 VAC supply) 24 VDC pulse (24-40 VDC supply)
Voltage drop	$\leq 2\text{VDC}$
Output frequency	Upto 100 Hz

5.2 Digital Outputs

Function	Digital outputs (signal isolated)
Max output value	12 VDC pulse (86-230 VAC supply) 24 VDC pulse (24-40 VDC supply)
Open Circuit voltage	12 VDC pulse (86-230 VAC supply) 24 VDC pulse (24-40 VDC supply)
Voltage drop	$\leq 2\text{VDC}$
Output frequency	Upto 1000 Hz

5.3 4-20 mA (4 wire and 2 wire)

Signal Mode	Standard 4-20 mA
Signal translation	See min-max measuring range in section 4.3
Maximum output value	22 mA (alarm condition)
Open circuit voltage	12 VDC
Load	0 to 500 ohm
Resolution	0.01 mA
Assigned variables	Volume flow, mass flow (dependent on selected mode)

5.4 MODBUS with RS485

Protocol	Modbus Applications Protocol Specification V1.1
Mode	32 bit mode
Response times	Direct data access: typically 20-50 ms
Device type	Slave
Slave Address Range	1 - 255
Baud rates supported	9600 BAUD 19200 BAUD 38400 BAUD 57600 BAUD 115200 BAUD
Data Transfer mode	RTU
Compatibility with earlier model	Fluidyne devices prior to 2021 have older version protocol with data distributed into 3 registers. Please check section 11 for more information on past Modbus implementation

5.5 4-20 mA HART

Version	HART 7.0
Device discovery	Microcyber/Fluidyne
Supported functions	0- Read unique device identification 1- Read primary variable units, primary variable values 2- Read the primary variable current value and percentage 9- Read device variables and status
Over range lower limit	3.800 mA
Over range limit	20.800 mA
Fault alarm (low current)	3.70 mA
Fault alarm (high current)	21.750 mA

5.6 Foundation Fieldbus

Version	H1
Device discovery	Microcyber/Fluidyne
Function blocks supported	Multiple analog output Integrator (Totalizer)
Speed	31.25 kbit/s

6. Power Supply

6.1 Supply Voltage

Terminal Voltage	Frequency (Hz)
86 – 240 VAC $\pm 20\%$	50/60 Hz
DC 20-36V $\pm 10\%$	-
Internal battery powered 3.3 VDC	-

6.2 Power Consumption

Transmitter – Max 3.5 W

6.3 Current Consumption

Max – 180 mA (24 VDC)

Max – 150 mA (110 VAC 50/60 Hz, 230 VAC 50/60 Hz)

Max – 10 μ A (sleep mode), 800-1000 μ A (measurement mode)

6.4 Power supply failure


- Totalizers stop at last value measured
- Data is maintained in NV memory

6.5 Electromagnetic compatibility

The device is class A certified device as per emission and immunity norms stated in standard EN/IEC 61326, CISPR 11/AMD1/AMD2 and in conformance with EMC Directive 2014/30/EU .


- Installed signal wiring should not be run together in same cable tray as AC power wiring.
- Fluidyne does not provide output cables
- Power supply cable to instrument recommended to be under 3 metre in length
- Device must be grounded and earthed at all times acc. to electrical codes and N-E voltage under 1V
- During application of EMI, flowrate and subsequent 4-20 mA output may vary upto 30% of m.v. and Fieldbus poll-response miss upto 35 nos

6.6 Connection for pulse output

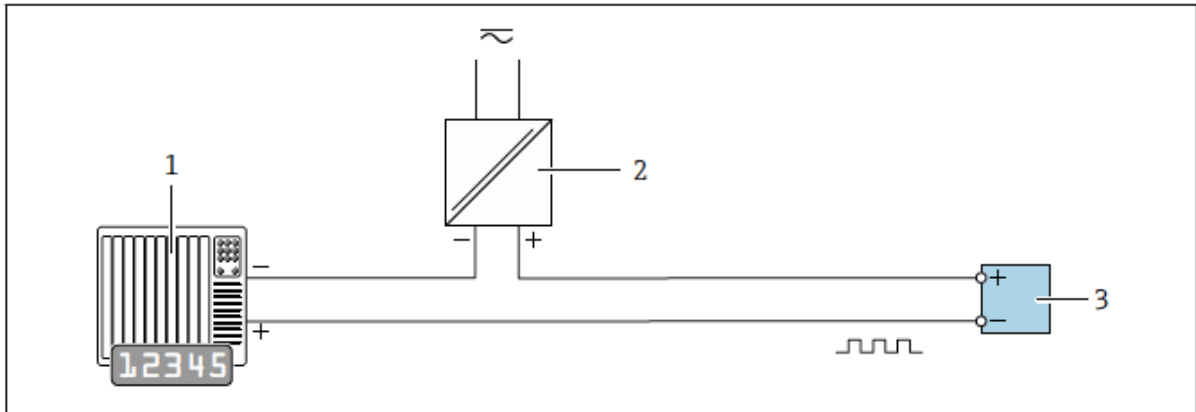

- 1 – Automation system with pulse input with suitable frequency card (eg PLC/DCS)
- 2 – Power supply
- 3 – Transmitter


6.7 Connection for RS485-Modbus

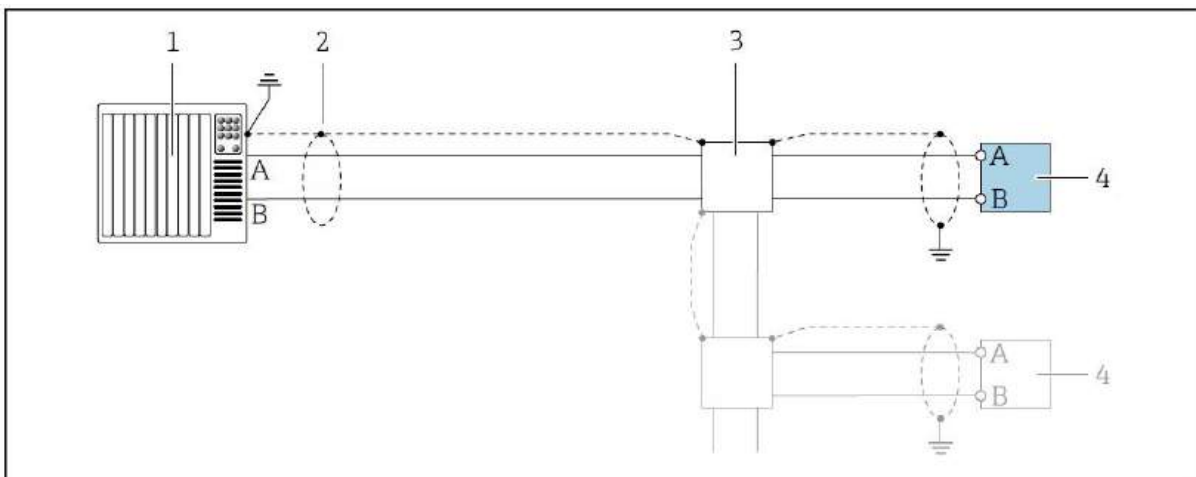

Connection example for Modbus RS485 in non-hazardous area and Zone 2

- 1 – Automation system (eg PLC/DCS)
- 2 – Cable shield provided. The cable shield must be grounded at both ends to comply with EMC requirements; observe cable specifications
- 3 – Distribution box
- 4 – Transmitter


6.8 Connection for Digital Output(s)

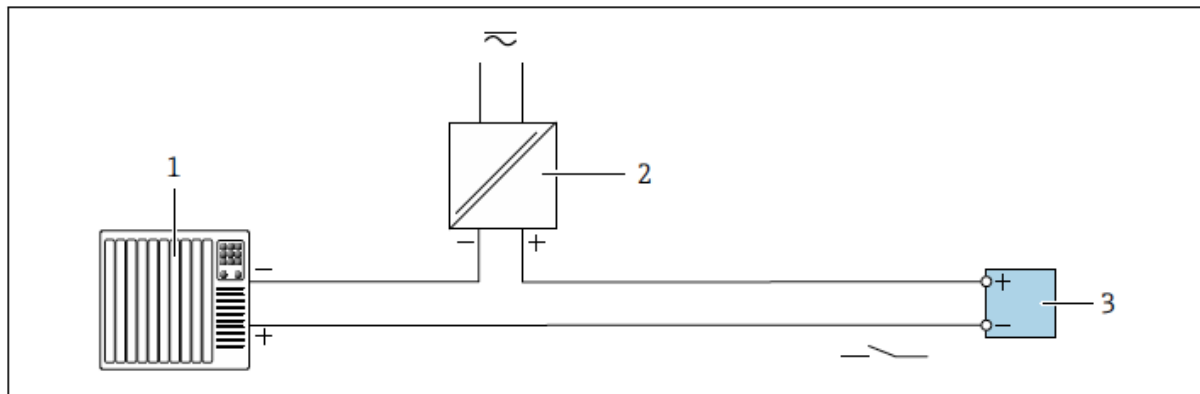

- 1 – Automation system with switch input (eg PLC/DCS)
- 2 – Power supply
- 3 – Transmitter (Values given in 5.2)

Note – Output is transistor NPN type

6.9 Connection for Digital Input(s)

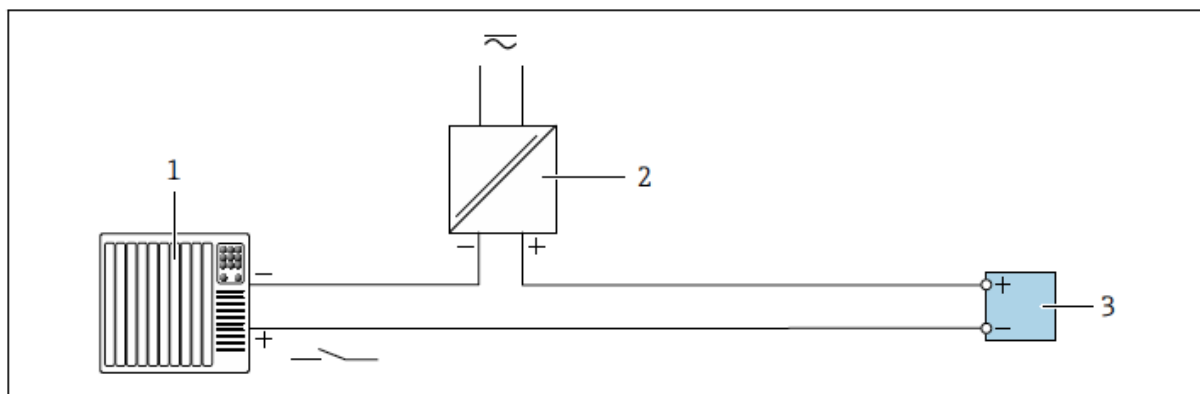


- 1 – Automation system with digital output (eg PLC/DCS)
- 2 – Power supply
- 3 – Transmitter (Values given in 4.3)

Note – Transistor or Potential Free input can be given

7. System dimensions


7.1 6650

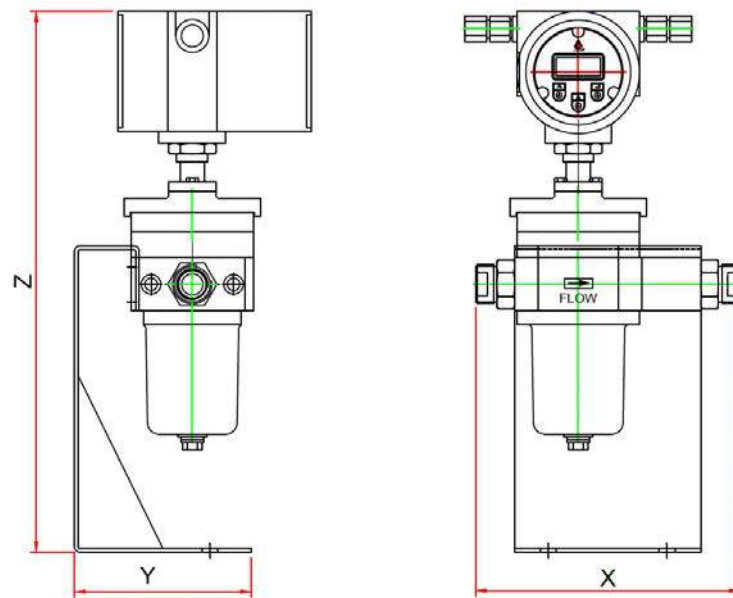

Series	Flowmeter size	X (mm)	Y (mm)	Z (mm)	Approximate Weight (kgs)
6650	DN15	224.0	150.0	460	07-10

Tolerance - ± 10 mm


7.2 6670

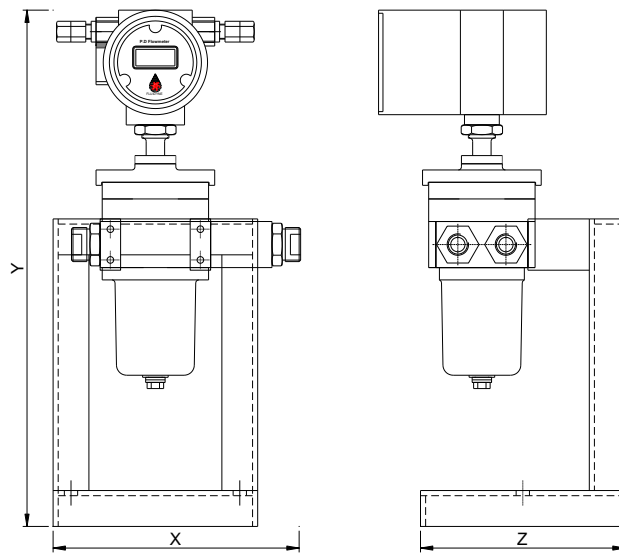


Series	Flowmeter size	X (mm)	Y (mm)	Z (mm)	Approximate Weight (kgs)
6670	DN25	234	515	170	10-12

8. Electrical Terminal Connections

8.1 Four Wire transmitter with DC voltage

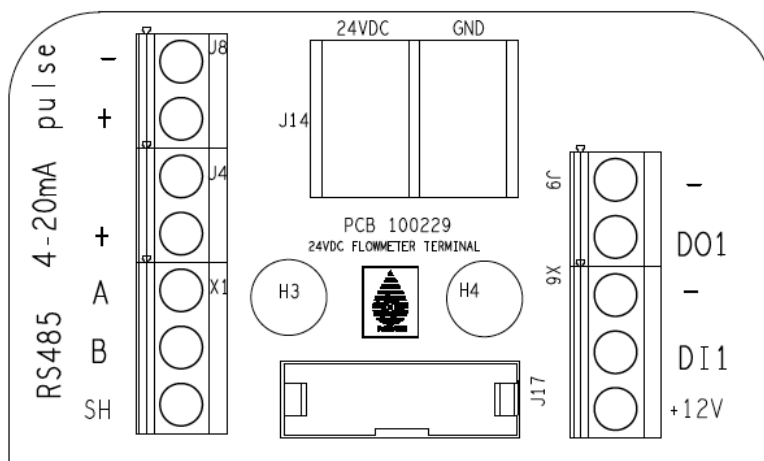

8.2 Four Wire transmitter with AC voltage

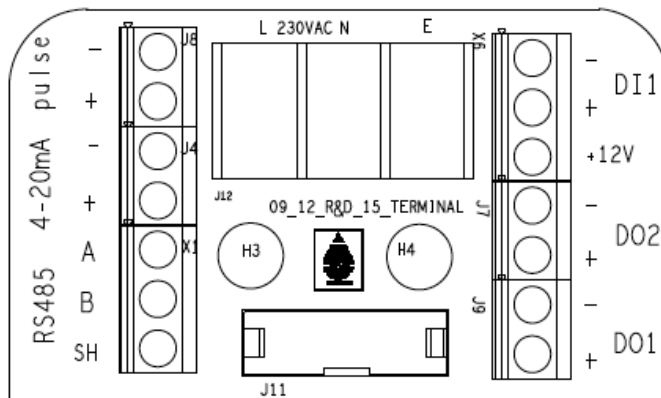


For 4-20 mA, RS485 and Pulse connectors please use shielded twisted pair with earthing shield cable. 18 AWG or 0.82 mm² cable is preferred.

For Supply and Relay connections please use 14 AWG or 2.1 mm² type cable.

Caution: Do not disconnect the FRC connector from the terminal card.

8.3 Two Wire transmitter

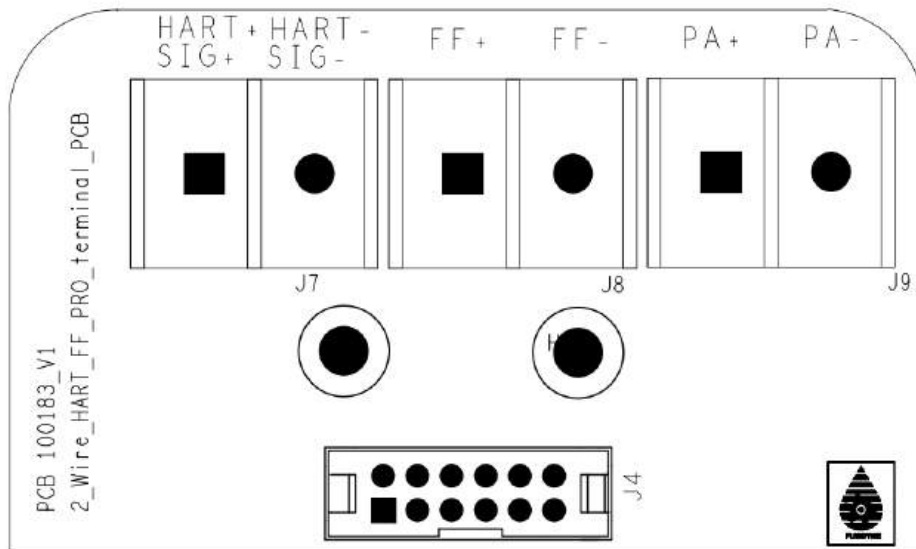

For 4-20 mA and HART options, connect the appropriate cable in SIG+/HART+, SIG-/HART-

For FF Bus H1, connect cables in FF+, FF-.

For Profibus H1, connect cables in PA+, PA-.

Cable sizes 18 AWG or 0.82 mm² cable is preferred.

Caution: Do not disconnect the FRC connector J4 from the terminal card.


9. Internal Device Settings – STD Transmitter (Four wire system)

9.1 Precautions prior to accessing settings

- Allow device to initialize and do not pass liquid through the device until it is initializing under initial level Fluidyne software information screen
- Keys are capacitive touch type and can be operated via glass directly
- Ensure hands are not covered with gloves and oil free for best experience

9.2 Internal settings in flowmeter device

- Capacitive touch keys are labeled as SW1, SW2, SW3

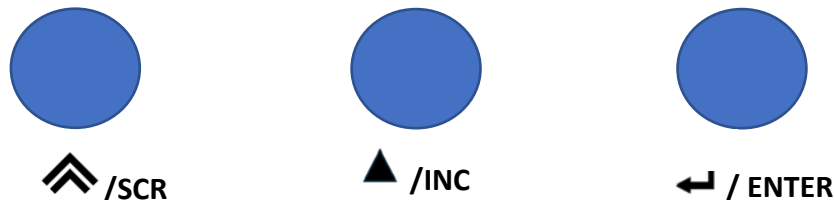


- Long press enter key for 5 seconds, the password screen comes up as below



- Use VIEW key to scroll between digits and INC key to set the digit. Enter the passkey as (1105) and press ENTER key to confirm the passkey.

9.3 General settings in device

- The next configurable parameter shown is the **Mode**. The mode has selection choice of VolFlow or MassFlow. The Fluidyne meter is capable of measuring values in terms of mass as well. For this, specific gravity of the liquid must be set in the following screens as well. Use the INC key to select VolFlow or MassFlow. The default value is VolFlow.

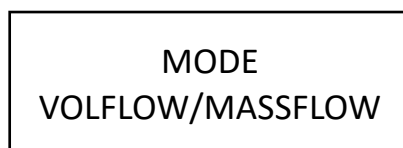

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is the **Unit**. The mode has selection choice of Liter and Gallon for VolFlow mode. When mode is set to MassFlow, customer can select between Kilograms and Pounds. Use the INC key to select desired unit.

UNIT LITER/GALLON/KILOGRAM/POUNDS

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is the **Flow Rate**. This setting takes predecessor values of Mode as well as Unit to provide options of per minute or per hour readings. Hence, please select appropriate Mode and Unit prior to selection of flow rate units.

FLOW RATE LPH/LPM/KGPH/KGPM/LBPH/LBPM
--

Use the enter key to scroll to the next screen.

9.4 4-20 mA settings in device

- The next configurable parameter shown is the **Analog 4-20 mA**. This setting should be enabled to select max and min values in 4-20 mA limits or disabled if not required. Use the VIEW key to scroll between Once enabled, please check next parameter for setting the flowrate limits of 4-20 mA signal.

4-20 mA
ENABLED/DISABLED

Use the enter key to scroll to the next screen. When 4-20 mA is enabled the below settings appear on the lcd.

- The next configurable parameter shown is the **4-20mA flowrate/velocity**. To switch between flowrate and velocity settings, press the increment key. This feature enables the user to define the desired low and high values for either flowrate or velocity, which will be reflected in the corresponding 4-20 mA output.

4-20 mA
flowrate

4-20 mA
Velocity

Use the enter key to scroll to the next screen.

For flowrate

- The next configurable parameter shown is the **4-mA flow rate**. Enter the flowrate that is required for the transmitter to provide value of 4 mA.

4 mA F/R
xxxxLPH

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is the **20-mA flow rate**. This setting takes predecessor values of 4-20 mA to allow value setting. Enter the flowrate that is required for the transmitter to provide value of 20 mA.

20 mA F/R xxxxLPH

Use the enter key to scroll to the next screen.

For Velocity

- The next configurable parameter shown is the **4-mA Velocity**. Enter the Velocity that is required for the transmitter to provide value of 4 mA.

4 mA VEL xxxxft/s

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is the **20-mA Velocity**. Enter the Velocity that is required for the transmitter to provide value of 20 mA.

20mA VEL xxxxft/s

- The next configurable parameter shown is **Density**. In case data is required in terms of mass flow, this parameter must be set to desired value. The units of this density screen are fixed to kg/l or g/cm³. Use the VIEW key to move between digits and the INC key to change digit values. Press the ENTER key to confirm value.

Density xxx.xxxx


Use the enter key to scroll to the next screen.

- The next configurable parameter shown is **PRE SWCH**. Keep this setting disabled as it is not generally required for flowmeters.

PRE SWCH ENABLED/DISABLED

Use the enter key to scroll to exit the password mode.

- Upon entering password 1111, parameter shown is the **k factor or Vol/Pls (Calibration factor)**. Note – This value must not be changed without the prior intimation to Fluidyne personnel as it is the main calibration factor of the flowmeter.

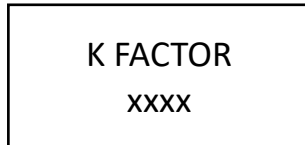

Use the enter key to exit the mode.

9.5 MODBUS settings in device

- The next configurable parameter is **Baud Rate**. There are five Baud Rate that can be set. They are 9600 B/S, 19,200 B/S and 38,400 B/S and 57,600 B/S & 115200 B/S. Use the 'VIEW' key to select any of the above Baud Rates. Press 'ENTER' key to confirm the setting.

BAUD RATE XXXX

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is **Parity**. Three options are available for this parameter. These are ODD Parity, EVEN parity and NONE Parity. Use 'ENTER' key to confirm the settings.

PARITY XXXX

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is **Slave ID**. There are maximum sixteen slave addresses that can be set from 01 to 255. Use VIEW key to select any required address. Press 'ENTER' key to confirm the settings.

SLAVE ID XXXX

Use the enter key to scroll to the next screen.

9.6 DOP Point

- The next configurable parameter shown is **DOPPoint** (short for Digital Output Point). This setting can be used in case digital output pulse is required after a set interval of liquid displacement.(the unit depends upon the selection of unit in previous setting)

DOP Point
0000000L

Use the enter key to scroll to the next screen.

9.7 Velocity Unit

- The next configurable parameter shown is **Velocity Unit**. This setting is used to set the unit for liquid velocity display through the pipe. There are two units available feet/seconds and metres/seconds. Switch between ft/s and m/s by pressing the increment key.

Vel Unit
ft/s

Vel Unit
m/s

Use the enter key to scroll to the next screen.

- The next configurable parameter shown is **Line Size in mm**. This setting is used to set the diameter of the pipe in millimetres, which is used further in velocity calculations.

LSIZE MM
xxx

Use the enter key to scroll to the next screen.

10. Standard Display Parameters

10.1 STD Transmitter (Powered)

The transmitter displays the following parameters on the 8X2 dot-matrix LCD display provided.

- The above display shows the Current litres in Litres(default). This can be reset to zero by long pressing the scroll key. This totalizer will automatically reset to 0.0 after completion of 9,99,999 lits. The rate screen depends on values set in Mode and Units. The bottom display shows the instantaneous flowrate through the meter. If the flow through the meter stops, the flowrate will be zero.
- Please view section 8.3 for more information

xxxxxx LT xxxxxLPH

- Press 'View' Switch once to display the next parameter. This above display shows the Cumulative Totalizer in litres. This Totalizer cannot be reset to zero. Press 'VIEW' Switch once to display the next parameter. This totalizer will automatically reset to 0 after 9,99,999.99 lits. The rate screen depends on values set in Mode and Units. Please view section 8.3 for more information

TT.LTR / TT KGS/TT LBS xxxxxxxxxx

- This display shows the instantaneous liquid velocity through the meter. If the flow through the meter stops, the velocity will be zero. The rate screen depends on values set in Mode and Units.

VEL m/s / ft/s x.x

11. MODBUS RTU protocol in Fluidyne devices

The flowmeter always acts as a Modbus slave device and supports the following function codes only. Fluidyne devices follow the 32 bit addressing mode (floating point) for all registers.

Sr. No.	Functions	Function Code
1	Read Input Register	04
2	Read Holding Register	03
3	Write Multiple Holding Register	10

The Flow Transmitter Modbus Module receives the frequency input from the Flow sensor, calibrates the signal based on the calibration factor programmed and transmits the following data to the Master.

1. Cumulative Totaliser : This is a non- resettable totaliser whose range is from 0 to 9999 9999 lits
2. Current Totaliser : This is a resettable totaliser whose range is from 0 to 9999 999.9 lits
3. Instantaneous Flowrate in LPH or LPM. This depends on the setting in the parameter settings made by customer
4. Velocity of flowing media in m/s or ft/s, depending on settings made in parameter settings
5. Density in g/cm³ only

11.1 Free and Open source Modscan software settings

1. To utilize these features effectively, follow these steps for setting up Modscan:
2. Install the Silicon Labs CP210x USB to UART Bridge drivers from Silicon Labs website. <https://www.silabs.com/developers/usb-to-uart-bridge-vcp-drivers?tab=downloads>
3. Install Modscan software on your system.
4. Launch Modscan.exe.
5. Navigate to Connection -> Connect.
6. Select the appropriate Port (Silicon Labs CP210x USB to UART Bridge) in the 'Connect Using' option.
7. Adjust the Baud rate according to your configuration matching with what baud rate is set in device. Default baud rate in device is 9600 bps
8. Default parity is none
9. Match the Slave ID as per what is set in device. Default slave ID is 1
10. In setup, select display options->floating point -> most significant register first
11. Confirm the settings by clicking OK.
12. Set the Length to 10
13. In the Drop-Down menu, select Holding Register/Input Register.

11.2 The Current LTR values can be read by using function code (0x03) (read holding register)

Query

Modbus Query Positions	Position Value	Description
1	1	Slave Id
2	3	Function code
3	0	Data Address of Register (High)
4	0	Data Address of Register (LOW)
5	0	No of register requested (High)
6	1 to 20	No of register requested (LOW)
7	CRC	Error Check
8	CRC	Error Check

Response by Fluidyne device (slave)

Modbus Register	Description
40001	CURRENT.LTR (XXXXXXX.XXXXX)
40002	

11.3 The Cumulative LTR and Flowrate values can be read by using function code (0x04) read input register

Query

Modbus Query Positions	Position Value	Description
1	1	Slave Id
2	4	Function code
3	0	Data Address of Register (High)
4	0	Data Address of Register (LOW)
5	0	No of register requested (High)
6	1 to 20	No of register requested (LOW)
7	CRC	Error Check
8	CRC	Error Check

Response by Fluidyne device (slave)

Modbus Register	Description
30001	CUMULATIVE.LTR (XXXXXXX.XXXXX)
30002	
30003	Flow Rate (LPH/LPM or set unit)
30004	
30005	Density
30006	
30007	Velocity (m/s ft/s)
30008	

11.4 To reset the value of the Current LTR using Function code (0x10) preset multiple registers

Query


Modbus Query Positions	Position Value	Description
1	1	Slave Id
2	16(0x10)	Function code
3	0	Data Address of Register (High)
4	0	Data Address of Register (LOW)
5	0	No of registers (High)
6	2	No of registers (LOW)
7	4	The number of bytes to write
8	0	Value writes at 400001(High)
9	0	Value writes at 400001(LOW)
10	CRC	Error Check
11	CRC	Error Check

Response by Fluidyne device (slave)

Response	Description
1	Slave Id
16(0x10)	Function code
0	Data Address of Register (High)
0	Data Address of Register (LOW)
0	No of registers (High)
2	No of registers (LOW)
CRC	Error Check
CRC	Error Check

12. Fuel Consumption Monitor Installation Guidelines

12.1 Typical installation diagram

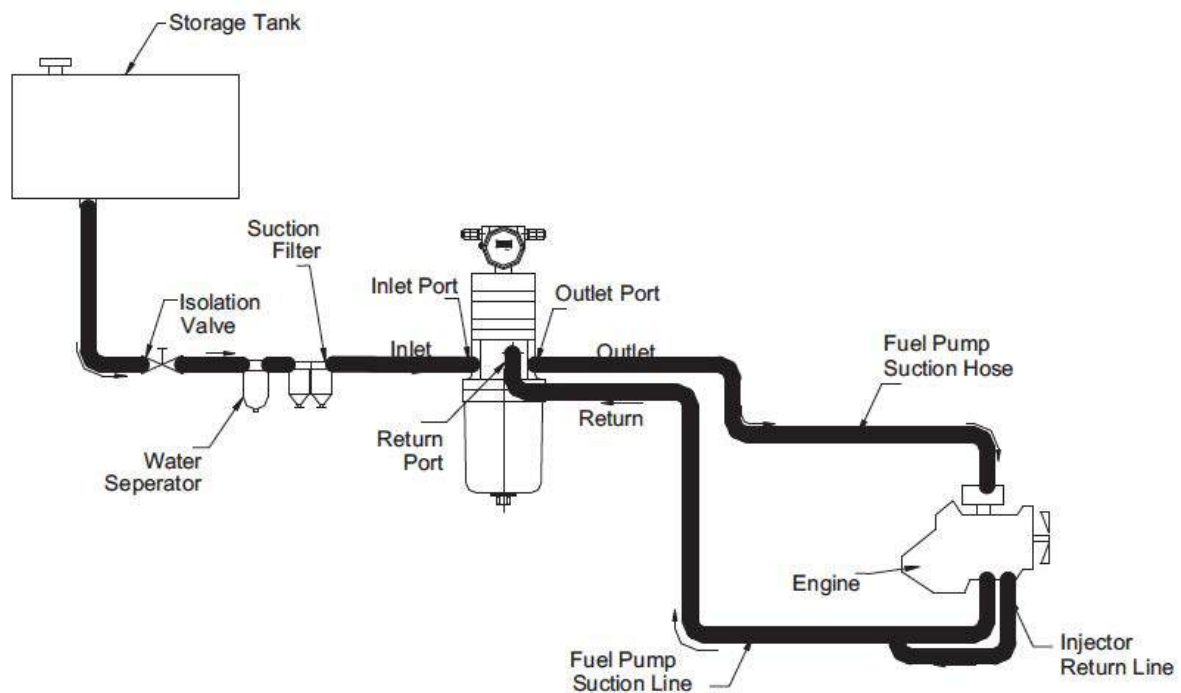

In an engine service configuration, the flowmeter **inlet port** must be connected after the suction filter and water separator to protect the instrument from debris and solid particles.

The **Outlet port** as labeled must be connected to engine fuel pump. The return line must be connected to the port marked '**Return**'. In this way the return from the engine is routed back to the engine supply line from the flowmeter manifold block. The original return line must be removed from the storage tank.


12.2 Prior to installation of FCM

Do's

- Review the system installation to ensure all components are in proper sequence, all isolation valves must be closed, and all electrical connections are complete.
- It is recommended that the FCM connected with rubber hoses only. Metal piping might lead to loosening of the connection to the meter due to vibrations and subsequent leakages.
- Before the FCM is installed in line ensure that the hose is sufficiently flushed with water or required liquid service to remove any debris like burr, soil particles and other dirt, rust, welding slag from the hoses. Ensure filtered product of under 50 micron to flowmeter for best results
- The unit should be mounted on the ground next to the engine base frame and should be grouted with the help of fasteners provided
- The unit should be installed between the engine fuel filter and the fuel pump
- All connections must be tight to prevent air-lock which can cause hunting/overspeeding
- Use recommended oil pressure switch to activate the engine run hours totalizer of the unit
- The recommended calibration interval of the unit is one year

Don'ts

- Never mount the unit on the engine base rail or any vibrating structure
- Do not mount the engine before the engine fuel filter
- Do not connect the unit to a power supply other than recommendation in 6.1
- Do not use NPT end fittings for hose connection. Use only recommended end fittings.
- Do not share the contacts of an already installed Oil Pressure Switch on the engine
Use of independent pressure switch is highly recommended

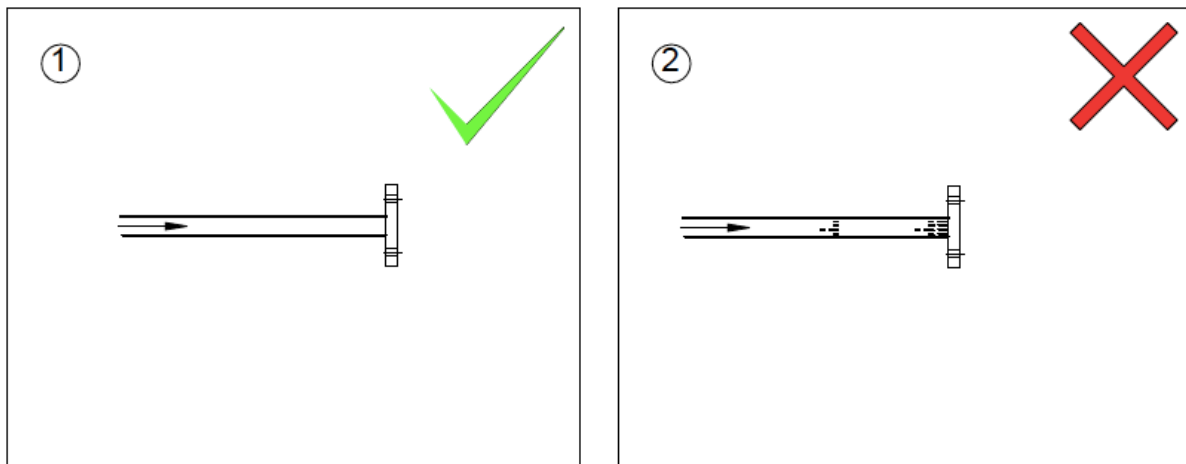

- Ensure that hoses are free of burr, particles and other material before FCM installation
- Particles left behind might jam the internal measurement chamber or cause filter choke. It is recommended to take a few runs of liquid and collect the same into a storage tank until the service at the installation point appears clean and devoid of solid matter

12.3 Air elimination

Customer must ensure instrument is full of fuel at all times. This unit does not come with air elimination mechanism. Customer must also ensure tight hose connections so that air does not seep into the fuel line and cause the engine to hunt

12.4 Products

The FCM is recommended for usage with liquid fuels such as HSD, LDO, Gasoline, HFO, Biodiesel derivatives, Kerosene derivatives only. Beyond such fuels or for fuels with additives, it is recommended to take prior approval from Fluidyne before operation.

12.5 Normal startup

- 1 – Ensure clean fuel service
- 2 – Ensure correct connections as per terminal connection diagram (Section 8)
- 3 – Ensure right voltage input to the device
- 4 – Set load to 10% and run the FCM for a period of 2-3 minutes to warm up the system. In this time electronics must be switched off.

5 - Set load to 50% and run the FCM for a period of 2-3 minutes. Now the system is sufficiently ready for operation to any load condition

12.6 High temperature startup

On higher temperature start up above 212 F (100 C) based on an ambient temperature of 25 C, special start up procedures are required to prevent damage to the flow meter components. A similar procedure should be followed on any thermal shock in excess of 80 C. The following equation may be used to determine approximate flowmeter warm up time.

$$T_h = (C_{nom}) * (OT_F - 212) / 100$$

T_h – warm up time in hours

C_{nom} – Nominal connection size

O_T – Operating Temperature in F

During this warm-up time the meter should be operated at approximately 5% of maximum flow so that temperature stabilizes slowly.

12.7 Continuous Operation - Clean Filtered Liquid Service

A positive displacement meter is used for clean service applications. This FCM is not suitable for liquids with greater than 100 micron particle sizes because the internal piston will not be able to move smoothly and will soon not move at all due to build-up of debris and solid sludge inside the meter.

Strainers are installed in pipelines ahead of pumps, meters, valves etc to protect such equipment from intrusion of pipe scale, welding splatter and other foreign material. The use of proper size strainer together with a element of suitable mesh pays dividends in reduced maintenance on mechanisms which are in contact with flowing liquids. When it is known that comparatively large amounts of lint or iron oxide are present in stream, a large strainer must be used as these materials clog up element screens rapidly-especially if resins, gums or varnishes are also present.

Larger size foreign matter like pebbles, welding beads etc should be removed at frequent intervals to prevent their abrasive action from damaging the element screen.

Fluidyne FCM 66x0 comes equipped with 149 micron reusable strainer. However, it is recommended that the customer installs additional 100 micron (minimum) strainer upstream in the inlet run of the PD meter in the pipework as shown

This enables all filter cleaning service to be localized at large strainer location and the larger strainer will also take longer for dirt deposits to eventually reduce flowrate to a certain threshold due to large surface area.

12.8 Products that dry/crystallize or polymerize

There are many liquids that crystallize, harden or polymerize on contact with air or decreased temperature. A proper system design and a good understanding of the product being measured will help avoid the possibility of air entering the system and product to be affected.

In applicable cases, customers must ensure heating or insulation of pipelines near to the point of flowmeter installation or continuous circulation of the product so that it does not solidify upon staying stationary or even flushing the lines with DM water to remove all traces of the product.

12.9 Custody transfer

A right k factor will need to be established under actual operating conditions if the instrument is to be used in custody transfer applications. This initial proving run should be carried out following the completion of above startup procedure and in accordance with local regulations.

NOTE – There are no user adjustable parts in the flowmeter. However, the meter cover and transmitter are provided with two cross-drilled bolts to facilitate sealing if required by local weights and measurements regulations.

12.10 Orientation of FCM in pipeline

FCM must always be installed horizontally only.

13. Maintenance

The Fluidyne 66x0 FCM will give many years of consistent performance with little need for maintenance or service. There are, however, several recommendations which if followed, will further extend the instrument's service life.

The instrument should be kept filled with the process fluid it is measuring. This prevents the exposure to any product vapors which, in the case of many products, are more corrosive than their liquids. In addition, this also prevents formation and build-up of deposits or gums which would cause increased mechanical friction.

Filter and strainer elements should be cleaned frequently. Debris and foreign matter are the biggest cause of meter wear and damage.

All other associated equipment within the system should be regularly maintained and checked for functionality.

NOTE – If instrument is being used in hazardous area, all instructions on the meter instruction plate and in this manual must be followed before the start of any maintenance.

If the instrument is removed from the process line, the line should be sealed with suitable covers. Rinsing the meter internals with solvent will ensure all internal parts remain free of debris.

13.1 Performance Considerations

The amount of maintenance necessary for efficient instrument performance is dependent on many factors and some are listed below –

Continuity of Operation – An instrument that operates continuously will require more attention than one used intermittently.


Working Flow Rate – The life of the instrument is proportional to the speed of its operation. If the instrument is operating at near or above maximum flow rate it will have a shorter life expectancy than if it were operating at its minimum flow rate.

Lubricity – The lower the lubrication properties of a process fluid being measured, the lower the life expectancy of the meter.

Cleanliness – A product contaminated with abrasive particulate will accelerate the wear of the instrument.

Air pockets – Intermittent air pockets in the liquid will cause sudden speed bursts of the internal piston which will lead to excessive wear.

13.2 Cleaning the Flowmeter Assembly

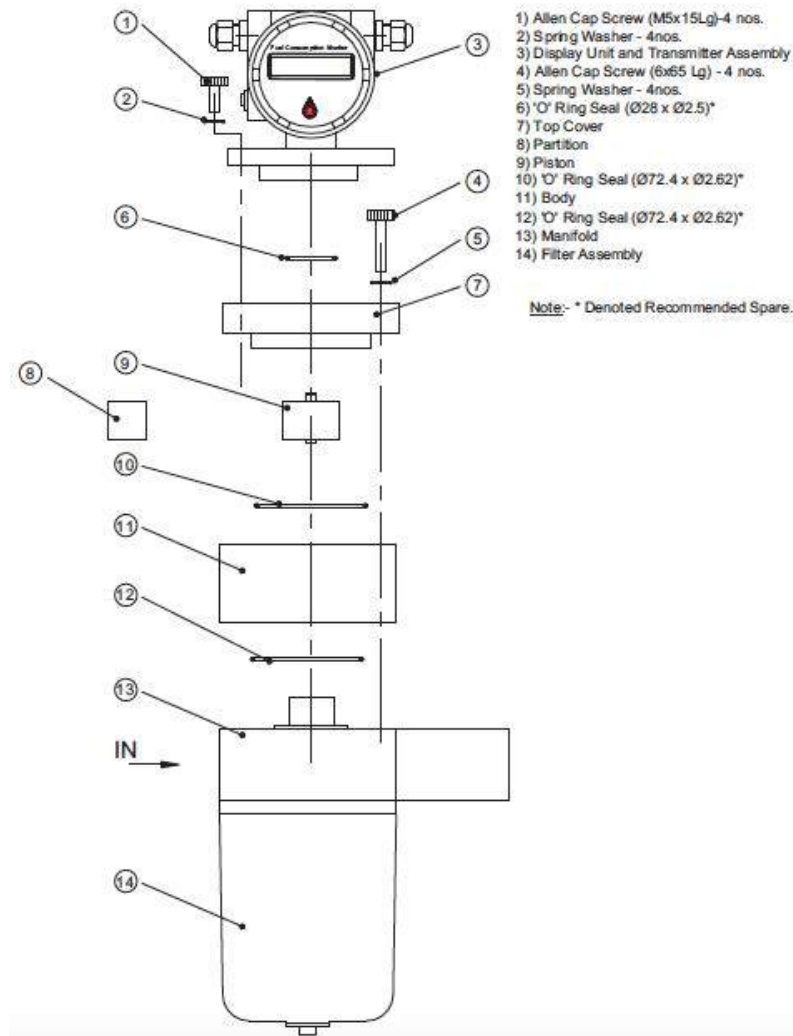


In the event of dirt particles entering the Flow Sensor Assembly owing to incorrect or damaged filter, the assembly has to be opened and thoroughly cleaned with a solvent such as kerosene or diesel fuel. In the interest of through cleaning and proper reassembly Strictly follow the procedure given below.

- Refer Flow Sensor Assembly Schematic
- Remove 02 Allen Cap Screw M6 X 15 (1) and 02 Spring Washer (2) lift out the Totalizer Assembly (3)
- Remove 04 Allen Cap Screw M6 X 40 (4) and 04 spring Washer (5) which clamp the entire flow Sensor module
- Lift out 'O' Ring seal (6) assembled on the face of Top Cover (7) and the Top Cover. Lift out Piston (9)
- Lift out body (11) along with partition (8). Remove 02 'O' Rings seals (10) from the face of body

- Thoroughly clean the Top Cover, Partition, Piston, Body and Manifold face with the help of solvent like kerosene or diesel fuel. Remove all adherent dirt particles smooth out any burr with a fine emery stick or 600 grit emery papers. If emery paper or stick is used to deburr thoroughly washed all parts again in the solvent
- Carefully examine the Piston (9) preferably under a magnifying glass. Carefully remove any metallic particles embedded on the bottom or top face and the outer diameter of the piston. Embedded metallic particles on the Piston are the single biggest reason for the piston jamming while in regular use. Thoroughly clean the piston with the solvent.
- Examine 02 'O' Rings (10) assembled in the Body (11). Replace if found damaged.
- Assemble 'O' Rings (10) on both faces of the Body and locate and assemble the Body on the Manifold (12).
- Align the groove on the ID of the Body with the groove on the face of the Manifold and insert the Partition (8) such that it fully meshes with the groove in the Body and the Manifold. Ensure that the Partition has been fully located in the groove and its top faces with the circular cup of the Manifold.
- Aligning the profile on the Piston (9) with the Partition, assemble the piston inside the body. Gently rotate the piston inside the body. It should rotate freely without the slightest friction. If the Piston is found to stick at some point during its rotation or resist movement even slightly, repeat the cleaning procedure of all parts again. The free rotation of the Piston inside the body is the single most important condition for ensuring accuracy and proper functioning of the flowmeter.
- Aligning the groove on the lowest face of the Top Cover (7) with the partition locate and assemble the Top Cover on the Body.
- Firmly clamp the Top Cover with the help of 04 Allen friction or resistance to movement
- Assemble the Totalizer Assembly on the Top Cover and firmly clamps with 02 Allen Cap Screws M6 X 15 (1) and 03 Spring Washer (2)
- Keeping the Outlet Port of the Vapor Separator Assembly (14) open blow air into the inlet.
- The free rotation of the piston should be felt and the totalizer should record the rotation Cap Screws M6 X 40 (4) with spring washer (5).
- Examine 'O' Rings seal (6) on the face of Top Cover. Replace if found damaged.
- Gently try to rotate the Piston by rotating its pin guided in the hole on the Top Cover. The piston should rotate freely. The assembly is now ready for use.

13.3 Removal/Replacement of the electronic cards

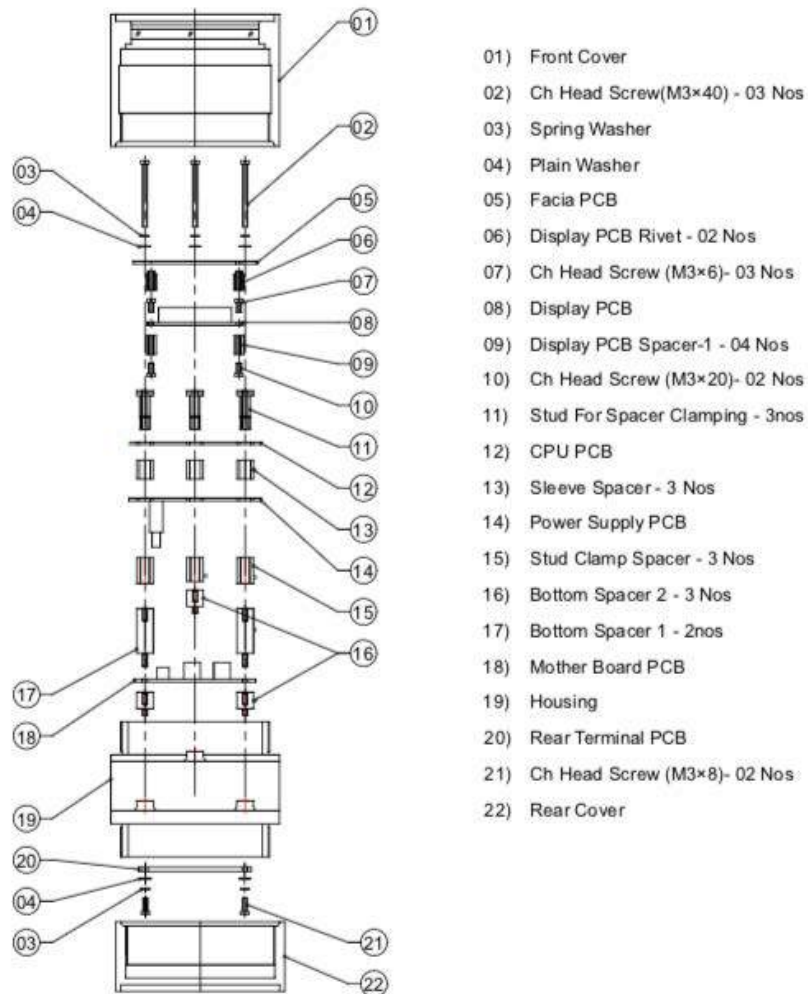

Caution – Isolate power before removing front cover. Do not open when module is energized when used in hazardous area.


The front cover has to be screwed out to access the electronic card stack. The stack must first be disassembled by removing the screws, spacers and washers.

Gently disassemble the assembly and contact Fluidyne representative for more information

ESD precautions must be followed.

13.4 Removal/Replacement of the sensor card

13.4.1 6650 and 6670

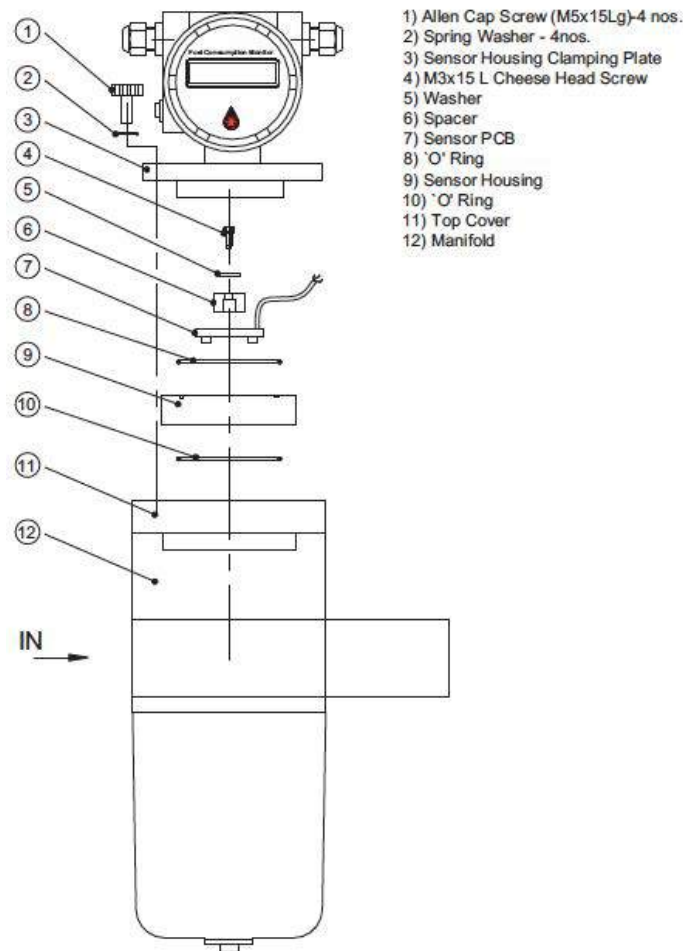


Caution: Ensure no flow in pipeline. Isolate the flowmeter on upstream and downstream ends. Ensure isolation of power before opening cover.

- Remove the 04 nos M5x15 Allen cap screws (1)
- Lift out the sensor housing clamping plate (3)
- Lift out the sensor housing (9) and sensor PCB assembly (7)
- Remove the M3x15 cheese head screw (4) and lift out the washer (5) and the spacer (6)
- Lift out sensor PCB (7)
- Assemble new PCB assembly and locate it with sensor housing (9)
- Clamp the sensor PCB with the help of spacer (6), washer (5) and cheese head screw M3x15 (4)
- Before placing the sensor housing back in top cover (11), examine and confirm O ring (8) and O ring (10) in good condition. Replace O rings if found damaged.

- Clamp the sensor housing (9) with the help of the sensor housing clamp plate (3) and secure with 04 nos allen cap screw M5x15 (1)

13.4.2 6640

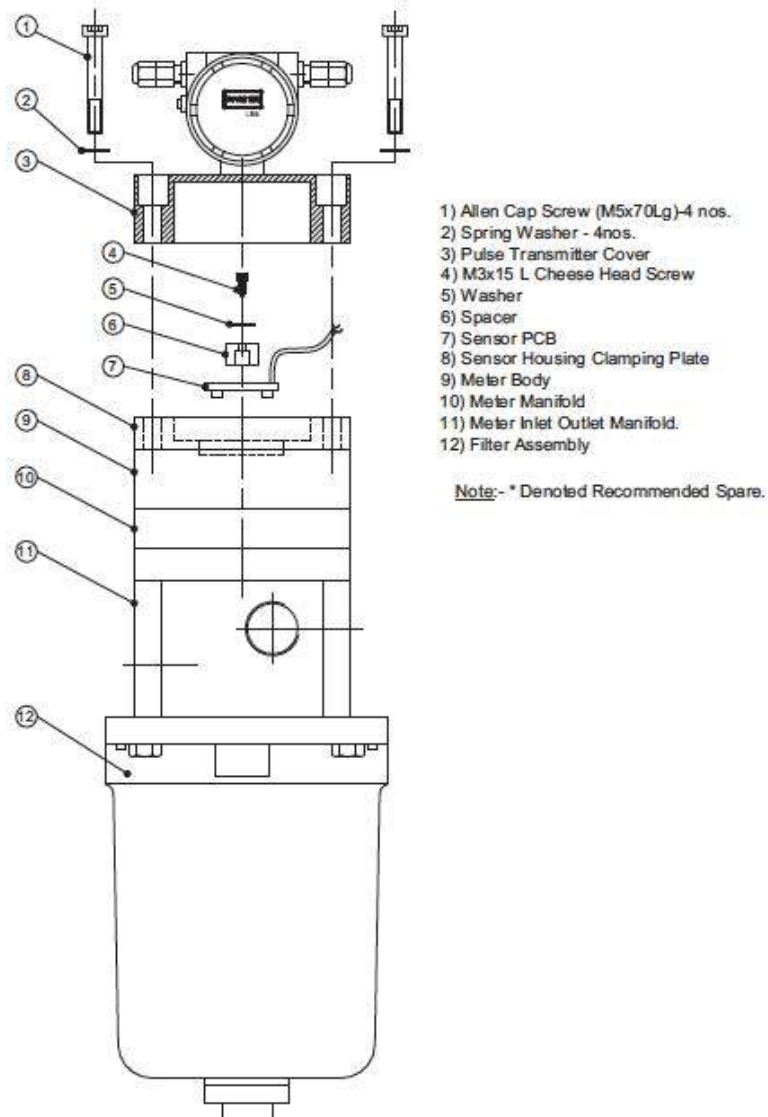


- Remove 04 nos M5 x 70 Allen Cap Screw [1]
- Lift out Sensor Housing Clamping Plate [8]
- Lift out Sensor Housing [8] with Sensor PCB Assembly [7]
- Remove M3 x 15 Cheese Head Screw [4] and lift out Washer [5] and Spacer [6]
- Lift out Sensor PCB [7]
- Assemble new Sensor PCB and locate it with the Sensor Housing [8]
- Clamp the Sensor PCB with the Help of Spacer [6], Washer [5] and Cheese Head Screw M3 x 15 [4]

- Before placing the Sensor housing back in the Top Cover [3] examine and confirm 'O' ring [8] and 'O' ring [10] and in good condition. Replace either 'O' ring if found damaged
- Clamp the Sensor Housing [7] with the help of Sensor Housing Clamp plate [8] and secure with 04nos Allen Cap Screw M5x70 [1].

13.5 Servicing check valve assembly

13.5.1 6650 and 6670

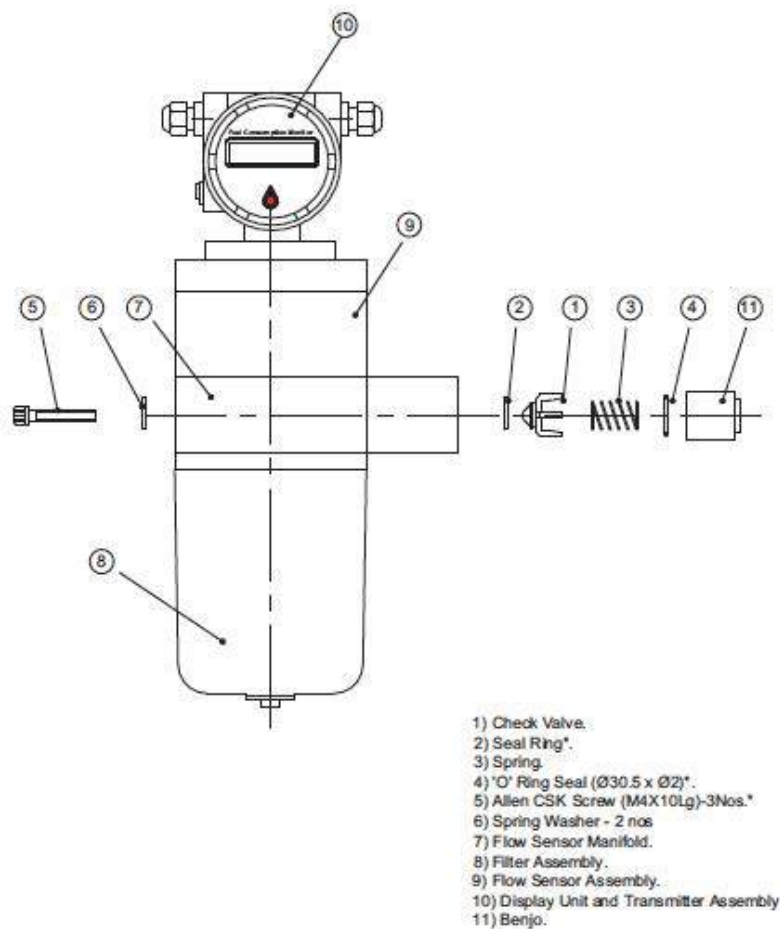


Note:- * Denoted Recommended Spare.

- Remove 03 CSK Allen Screw M4 X 10 (5), pull out Banjo (12)
- Pull out Check Valve (1) and spring (3) housed in the Flow Sensor Manifold (8)
- Clean the Check Valve housing in the Flow Sensor Manifold of any dirt or deposition
- Clean the Check Valve and carefully clean any dirt or deposition sticking to its four guide ribs
- Examine the Seal Ring (2). Replace if found damaged
- Examine 'O' Ring Seal (4). Replace if found damaged

- Assemble the Check Valve and spring in the Flow Sensor Manifold Housing. Ensure free back and forth movement of the Check Valve
- Ensure 'O' Ring seal (4) correctly assembled in its groove on the face of the Air Outlet & Return Manifold
- Assemble Banjo (12) and secure with 03 CSK Allen Screw M4x10(5)
- Assembly is now ready for use

13.5.2 6640

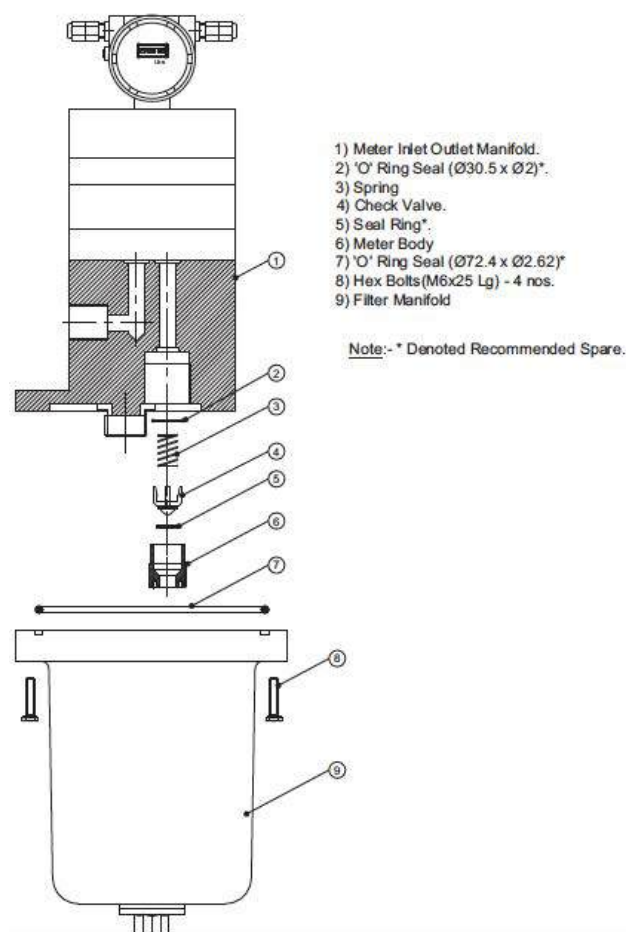


- Remove Hex Bolt M6 X 25 (8), pull out Banjo.
- Pull out Check Valve (4) and spring (3) housed in the Flow Sensor Manifold (9)
- Clean the Check Valve housing in the Flow Sensor Manifold of any dirt or deposition
- Clean the Check Valve and carefully clean any dirt or deposition sticking to its four guide ribs
- Examine the Seal Ring (5). Replace if found damaged
- Examine 'O' Ring Seal (7). Replace if found damaged
- Assemble the Check Valve and spring in the Flow Sensor Manifold Housing. Ensure free back and forth movement of the Check Valve.
- Ensure 'O' Ring seal (7) correctly assembled in its groove on the face of the Air Outlet & Return Manifold.

- Assemble Banjo and secure with Hex Bolt M4x25 (8)
- Assembly is now ready for use

13.6 Removal/Replacement of the FCM flowmeter filter

13.6.1 6650 and 6670

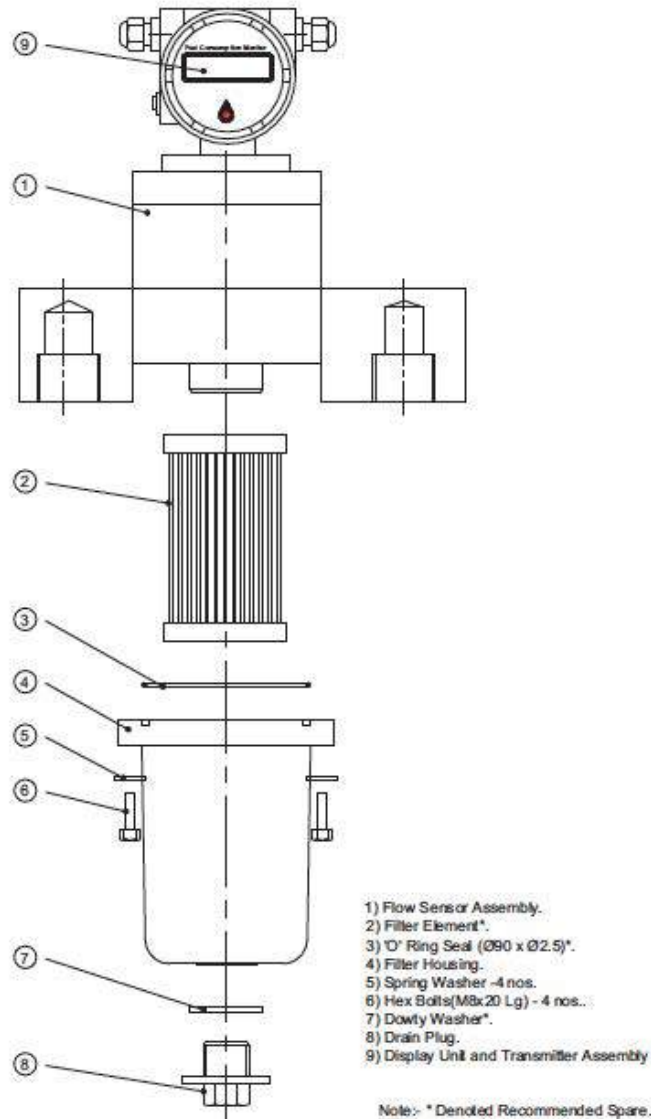

Caution: Ensure no flow in pipeline. Isolate the flowmeter on upstream and downstream ends.


Note : It is recommended to replace the filter element once every 6 months for trouble free performance of the FCM.

The frequency of filter element change will depend upon the contamination level in the fuel and will vary from site to site. To replace filter element, follow below steps with above diagram as a reference.

- Isolate the fuel supply to the unit from the storage tank
- Remove Drain Plug (8) and drain out the fuel from the Filter Housing from the Flow Sensor Assembly (1)
- Remove 04 Hex Bolt M6 X 20 (6) to detach the Filter Housing from the Flow Sensor Assembly (1)
- Pull out Filter Element (2) from the manifold provided on Flow Sensor Assembly. Clean thoroughly with a light solvent like kerosene or petrol. Use a soft Wire brush if require
- Fully push in the cleaned Filter Element on the round boss provided
- Examine 'O' Ring Seal (3) on the face of the Filter Housing. Replace if found damaged
- Placing the face of the Filter Housing on the Flow Sensor assembly manifold, assemble 04 nos
- M6 X 20 Hex Head Bolts firmly tighten all four bolts
- Examine Dowty Washer (7). Replace if the sealing rubber ring is found damaged
- Assemble the drain plug and the Dowty washer and tighten firmly
- The unit is now ready for regular use

To reuse the same mesh, it is recommended that the filter be examined for mesh damages or large dents. Clean the filter in a jet of debris-free clear DM water/solvent. Ensure all debris is washed away and filter is free of contaminants. Check the filter again for any damages to the mesh.

13.6.2 6640

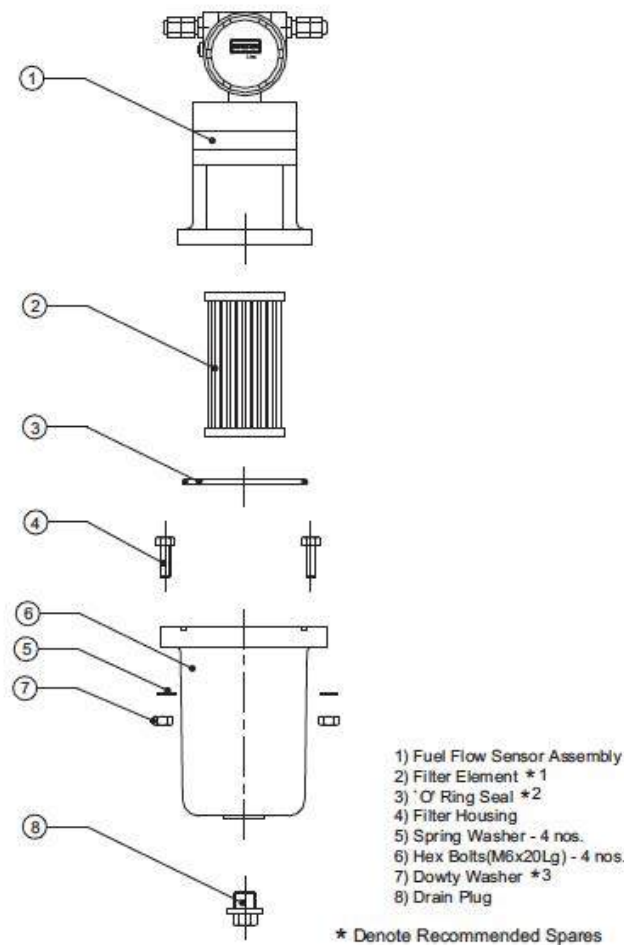

The FCM is provided with a 149 Micron reusable wire mesh filter element. Depending upon the contamination of the fuel it will be required to periodically clean the filter element. The frequency of filter element cleaning will depend on the extent of contamination and may vary from site to site. To replace the filter element, proceed as below steps while referring to above filter assembly schematic

- Isolate the fuel supply to the unit from the storage tank
- Remove Drain Plug (8) and drain out the fuel from the Filter Housing from the Flow Sensor Assembly (1)
- Remove 04 Hex Bolt M6 X 20 (6) to detach the Filter Housing from the Flow Sensor Assembly (1)
- Pull out Filter Element (2) from the manifold provided on Flow Sensor Assembly
- Clean thoroughly with a light solvent like kerosene or petrol. Use a soft Wire brush if required
- Fully push in the cleaned Filter Element on the round boss provided
- Examine 'O' Ring Seal (3) on the face of the Filter Housing. Replace if found damaged
- Placing the face of the Filter Housing on the Flow Sensor assembly manifold, assemble 04nos
- M6 X 20 Hex Head Bolts firmly tighten all four bolts

- Examine Dowty Washer (7). Replace if the sealing rubber ring is found damaged
- Assemble the drain plug and the Dowty washer and tighten firmly
- The unit is now ready for regular use

14. Troubleshooting

The information on this section has been provided as an aid for basic troubleshooting. Disassembly procedures have been outlined in chapter 13. If the 66x0 has been found to be in need of repair, it is recommended the user contact the nearest Fluidyne service office or representative. It is important that servicing is performed by trained and qualified personnel.

Condition	Probable Cause	Corrective Actions
Engine starves with no fuel supply	Very low or no fuel in supply tank	Ensure enough fuel in tank
	Choked filter element	Replace filter element. Check section 13.6
	Suction leak in connecting hoses (for -ve suction head only)	Retighten all hoses
	Piston jammed with debris	Open the meter, clean the internal measurement chamber. Check section 13.2
	Stuck check valve poppet	Refer to replacing float valve assembly guide section 13.5
	Air leak into the fuel suction line	Tighten all hose connections
Totalizer display is not counting or blank	Piston jammed with debris	Open the meter, clean the internal measurement chamber. Check section 13.2
	Breakage in wiring/incorrect supply	Check wiring line for any damages or breakages. Ensure right supply voltage to FCM
	Flow sensor card defective	Replace flow sensor card. Check section 13.4
	Incorrect calibration	Recalibrate flow sensor. Connect with Fluidyne representative. Check section 15 for details.

	Choked filter element	Replace filter element. Check section 13.6
Modbus data not showing	Incorrect polling of registers	Please check Modbus interfacing spec in section 11
	Breakage in wiring	Check wiring thoroughly between FCM to receiver
	Flowmeter not powered on	Switch on power to flowmeter
	Defective Modbus card	Change Modbus card. Check section 13.3

15. Contact personnel

Original Equipment Manufacturer

Fluidyne Control Systems P Ltd

S No 79/2, Plot No. 12

Near Agarwal Godown

Shivne, Pune – 411023

Maharashtra

Phone No. - +9120 2529 0504

Email – inquire@fluidyne.co.in

Spares contact

Person Name – Nita Bobade

Ph No – +91 992250 7989

Email ID – nita.bobade@fluidyne.co.in

Service contact

Person Name – Lalit Janala

Ph No – +91 99232 76935

Email ID – techsupport@fluidyne.co.in

Person Name – Akshay Kadam

Ph No – +91 77988 34651

Email ID – akshay.kadam@fluidyne.co.in